

Interactive Whiteboard System ^{IS-01}

User Manual

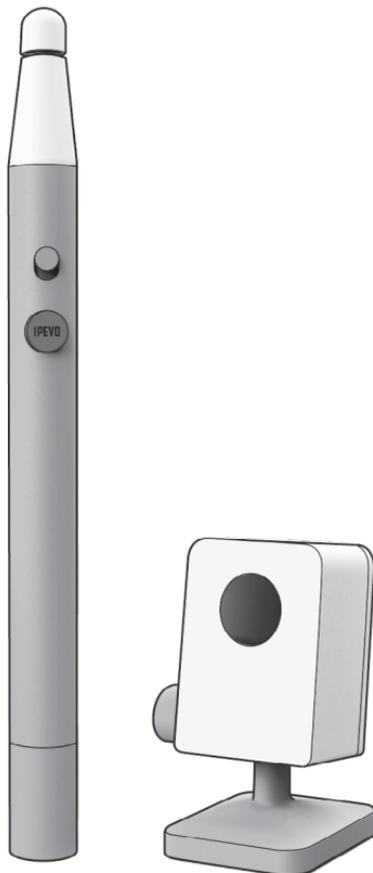


Table of Contents


What's in the Box	1
The Basics	1
Two Ways to Use It	2
How It Works	3
Get to Know It	4
Installing It	5-11
Step 1: Software & Driver Installation	5
Step 2: Positioning and Connecting the Sensor Cam	5-7
Step 3: Securing the Sensor Cam	7-9
Step 4: Connecting to the Computer	9
Step 5: Readyng the Interactive Pen	9
Step 6: Calibration	10-11
Using It	12-13
Using IPEVO Annotator Software	14-15
FAQ	16
Troubleshooting	17

What's in the Box


Congratulations on your purchase of the IS-01 Interactive Whiteboard System. After a few simple steps, your system will be calibrated and ready to use.

Your package should contain the following:

- IS-01 Sensor Cam
- IS-01 Interactive Pen
- 2m USB cable
- Ceiling Mount
- Replaceable Pen Cap
- User Manual (this document)
- 2 AAA Batteries

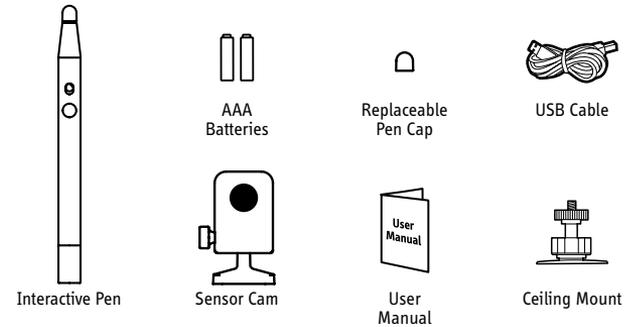


Warning: Disassembling the pen tip may damage the Interactive Pen. Please refrain from loosening or disassembling the pen tip at all times.



The Basics

The IPEVO Interactive Whiteboard System, or IS-01, turns your large projection screen into an interactive touchscreen, giving you the ability to easily draw and annotate for education and business. Plus, because IS-01 is compatible with many different kinds of software, you'll also be able to control your computer (and what's on the screen) at a distance. And this is all possible no matter what make and model of projector you have.

Two Ways to Use It

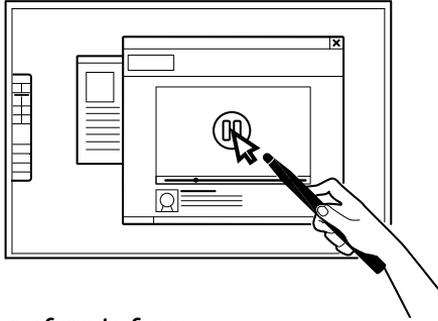

Use the Interactive Pen as a Computer Cursor

The Interactive Pen can behave like a mouse, transforming any surface into a touchscreen. Use the Pen to intuitively perform the actions you'd normally use your mouse to perform.

Note: The Interactive Pen can perform normal mouse actions including click, double click, and drag. However, some actions are not executable with the Pen, such as hovering.




Annotate Your Text and Images


Using IPEVO Annotator, you can draw and write directly on your interactive whiteboard. You can even draw on top of your document camera's live video feed. Engage your audience and clarify your material.

How It Works

IS-01 is made up of two devices: the Sensor Cam and the Interactive Pen. The Sensor Cam detects the physical location of the Pen and sends this information to your computer, which then translates the Pen's motion into cursor motion. Wherever you move the Pen, the computer will move its cursor in real time. You can also perform mouse clicks and drags with the Pen.

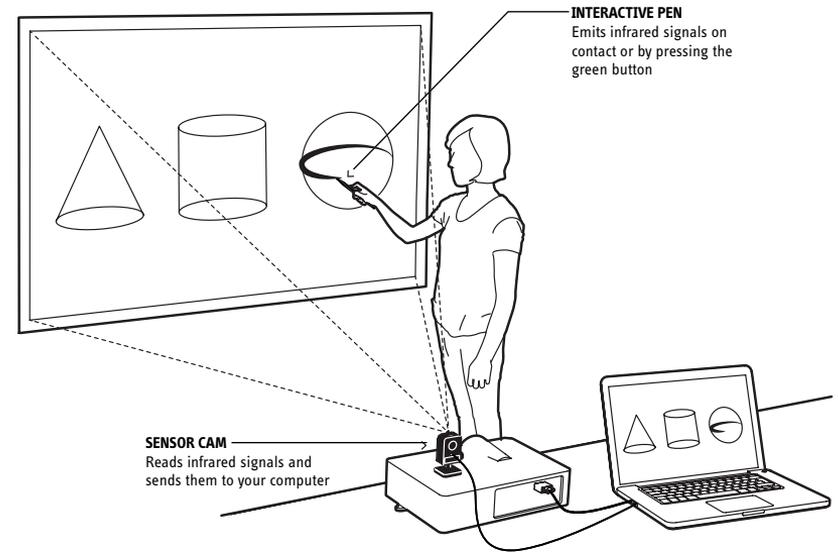

Get to Know It

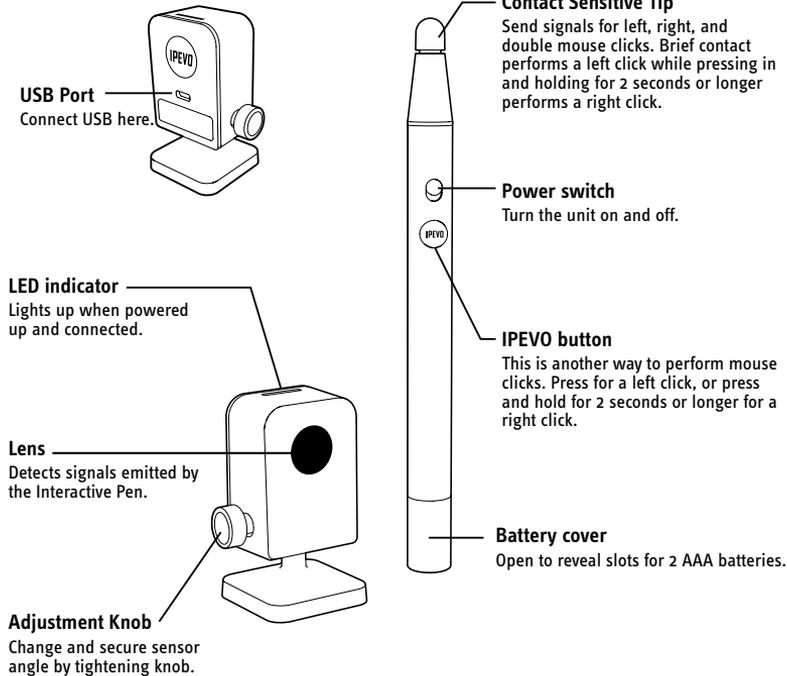

Installing It

1. Software & Driver Installation

IS-01 requires **IPEVO IS-01 Driver** to function. A free annotation software **IPEVO Annotator** is also included in the driver.

There is no included CD-ROM for IS-01 in this package. Please visit the IPEVO website to download the latest version of IS-01 Driver at:
<http://support.ipevo.com/IS-01>

Note: IS-01 can be used with third-party mouse-based annotation software, but we highly recommend using it with IPEVO Annotator to fully utilize the potential of your IS-01.

After downloading,

PC:

1. Double-click the downloaded file and follow the onscreen prompts to complete the installation for IS-01 Driver.
2. Follow the onscreen prompts to accept or decline installation of the Annotator software.
3. An "IS-01" icon and an "Annotator" icon will appear on the desktop after the installation is completed.

Mac:

1. Double-click the downloaded file. A folder named "IPEVO IS-01" will appear.
2. Drag the "IPEVO IS-01" folder into the Application folder to complete the installation.
3. Double-click the "IS-01 Driver" to start it up. The IS-01 icon will appear on the top right of your status bar.

2. Positioning and Connecting the Sensor Cam

Proper position of the Sensor Cam is important for optimum operation.

Follow these guidelines to place the Sensor Cam:


- For most projectors, a good position for the Sensor Cam will be the same location as the projector. One exception to this is if you are using a short-throw projector. In that case, you will need to place the Sensor Cam further away from the screen than the projector.
- Minimal distance from your screen depends on screen size. Place the Sensor Cam according to the recommended distances in the chart below:

Screen Size	50"	60"	80"	100"
Minimal Distance	5 ft (155 cm)	5.5 ft (170cm)	7.5 ft (230 cm)	9.5 ft (290 cm)


Installing It (cont'd)

- The Sensor Cam should face directly at the projection screen. Depending on your screen's height, you will have to adjust the Sensor Cam's Head to face upward or downward. Please refer to the steps below:


1 Loosen

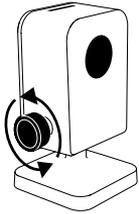


2 Adjust Angle

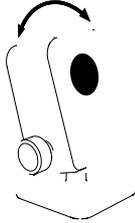

3 Tighten

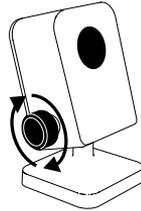

- The Sensor Cam is best placed opposite the center of the screen at a straight-on angle. However, a straight-on angle is not required for acceptable operation, and the Sensor Cam may be placed at another angle if necessary. Please refer to the diagram below for placement zones according to accuracy quality:

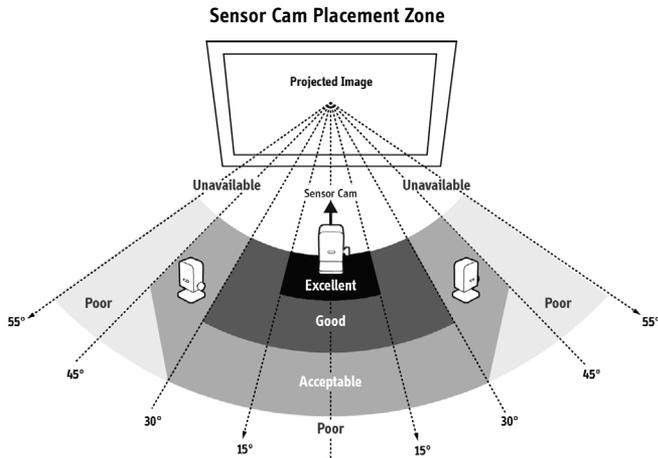

As you can see:

- Accuracy is better when the Sensor Cam is closer to the center.
- Accuracy decreases as the angle increases.
- Larger screens require more distance between the screen and the Sensor Cam.


Note: Please keep a clear path between the Sensor Cam and the projection screen to ensure proper operation.

3. Securing the Sensor Cam

Once you've found the right position, it's important to make sure your Sensor Cam is steady and secure. There are three ways to secure your Sensor Cam, depending on your setup:

A. Placing on the desktop


Use a flat, smooth desktop surface. Make sure nothing is blocking the Sensor Cam's path to the screen surface. Adjust the knob to angle the Sensor Cam directly at the center of the screen surface.

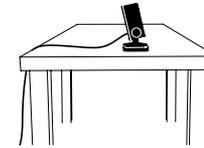

B. Using an upside-down Ceiling Mount


IS-01 can be mounted upside-down onto the ceiling or ceiling-mounted projector. To do so:

- Twist the Sensor Cam base onto the screw on the Ceiling Mount until tight. Turn the star-shaped knob near the base for additional angle adjustment.




Installing It (cont'd)

2. Before affixing the mount to the ceiling, hold the Sensor Cam in an area just below (by a few inches) where you intend to mount the projector. Run the Sensor Cam Position Diagnosis (see Page 11) with the Sensor Cam in this position to ensure maximum accuracy.

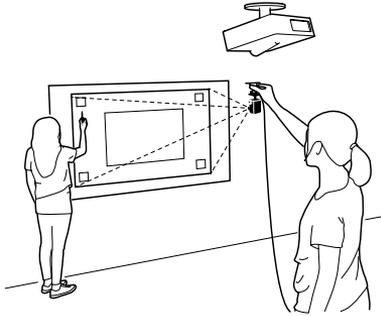


3. Ensure the mounting surface is clean and free of grit. Remove the sticker from the bottom of the Ceiling Mount, and affix the Ceiling Mount firmly onto the mounting surface.

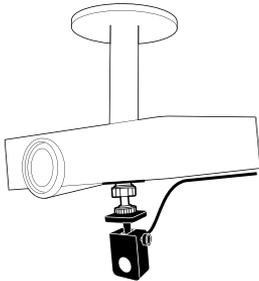

Note: The sticker of Ceiling Mount is extremely adhesive and should only be applied once. The Sensor Cam can be detached without removing the Ceiling Mount. Simply unscrew the Sensor Cam from the Ceiling Mount.


C. Using a tripod

The Sensor Cam comes with a built-in tripod mount. Consider mounting the Sensor Cam onto any standard tripod.

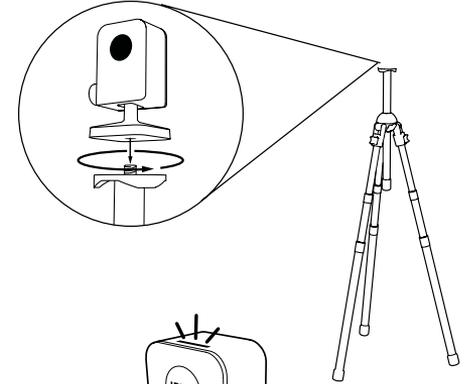


4. Connecting to the Computer

Once you've placed and secured the Sensor Cam, connect it to your computer using the included USB cable. The Sensor Cam LED indicator will light up once connected.

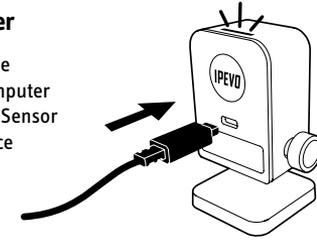

5. Readyng the Interactive Pen

Remove the battery cover from the Interactive Pen and insert 2 AAA batteries. Replace the cover. Turn on the pen when ready to use.

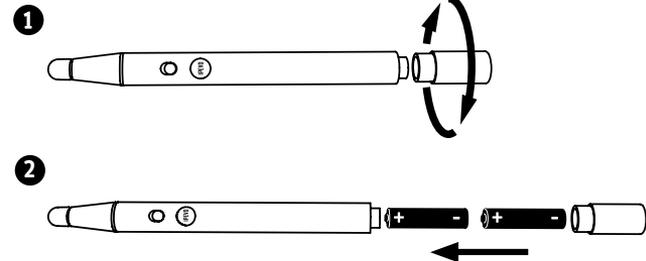

Installing It (cont'd)

6. Calibration

IS-01 must be calibrated before use to ensure accurate operation. This process only takes a couple of steps.

IS-01 requires IPEVO IS-01 Driver to function. If you have not previously installed the Driver, please refer to Page 5 for the downloading and installation instructions.

For PC, the calibration application will appear the first time the Sensor Cam is connected to the computer. For Mac, if you are using the IS-01 for the first time, you'll need to double-click on the "IS-01 Driver" to start it up. After that, the IS-01 icon will appear on the top right of your status bar and you can click on it and run the calibration application from the drop-down menu.

When calibrating, please use the Interactive Pen and follow the instructions on screen (and reprinted below) to complete the calibration.

Any time after the first time that you wish to calibrate, execute the following file:

PC: Start Menu -> Program files -> IPEVO -> IS-01 -> Calibration


Mac: Application folder -> IPEVO IS-01 -> Calibration

Note: The Interactive Pen must have batteries and be switched on for calibration and operation.

Calibration Steps

Step 1: Sensor Cam Coverage Detection

Tap each corner white square (in any order) with the tip of the Interactive Pen. Make sure the resulting dots appear inside the center white box. If not, please move the Sensor Cam until all points are contained within the white box. Then, press Space to continue.

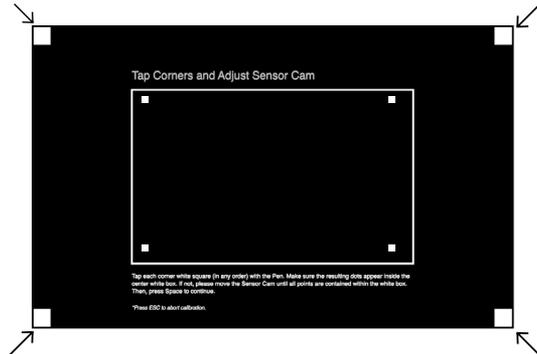

Step 2: Accuracy Check

With the Pen, tap the center of each red crosshair that appears. Four crosshairs will appear in total. You MUST tap all four in turn. Failing to do so may impair Pen accuracy.



Step 3: Calibration Completed

After the process you will be returned to your desktop and your IS-01 will be ready for use.

Sensor Cam Diagnosis

If you find the pen trace dithering or inaccurate after the initial calibration, your Sensor Cam may need further adjustment. Please run the Sensor Cam Diagnosis and reposition the Sensor Cam according to the suggestions given.

This diagnostic tool is located in:

PC:

Start Menu -> Program Files -> IPEVO -> IS-01 -> Sensor Cam Diagnosis


Mac:

Application folder -> IPEVO IS-01 -> Sensor Cam Diagnosis

Using It


Controlling cursor movement

Simply move the Pen in front of the screen area, being careful not to block the Pen's path to the Sensor Cam in your body. The mouse cursor will follow the Pen's movement in real time.

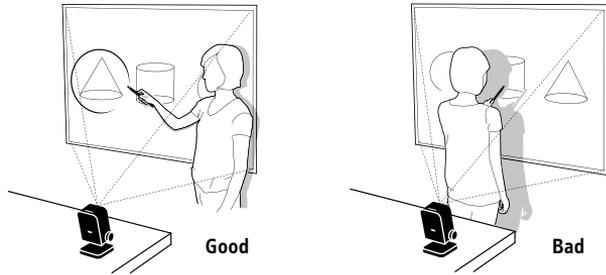


Controlling the computer and applications

Mouse clicks can be performed both within the operating system and in a wide variety of software applications. To do so, use either of two methods:

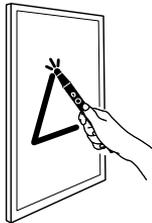

Touch the contact-sensitive Pen tip onto the screen surface.

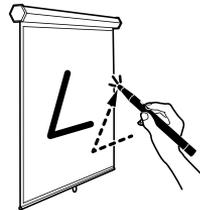

Press the green button.

A variety of mouse controls are possible using these methods:

Left click: Tap the tip onto the surface, or press the IPEVO button once.


Double click: Quickly tap the tip onto the surface twice, or press the IPEVO button twice.

Right click: Press and hold the tip onto the surface, or press and hold the IPEVO button. Hold for at least 2 seconds.

Click and drag: Press and hold the tip onto the surface, or press and hold the IPEVO button. While doing so, move the pen to the desired spot.

Adding reach with the Extension Wand (Optional Accessory)

When using a larger or taller screen, attach the Extension Wand Accessory to the Interactive Pen to help reach all areas of the screen. The 16.5" (420 mm) Extension Wand for Interactive Pen is available at www.ipevo.com

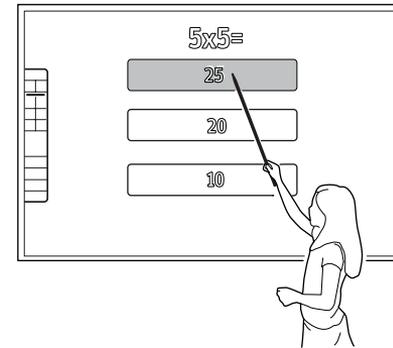

Installing the Extension Wand

Simply push the Extension Wand into the bottom of the Interactive Pen till you hear a click.



Using IPEVO Annotator Software



IPEVO Annotator Software

IS-01 comes with IPEVO Annotator, a screen annotation software which can be used in combination with any other software/application. You can draw, write and annotate onto images on the screen. Or, you can create a blank whiteboard to turn your projection screen into an interactive whiteboard.

After calibrating IS-01, you can start IPEVO Annotator by navigating to:


PC: Start Menu -> Program Files -> IPEVO -> Annotator

Mac: Application Folder -> IPEVO IS-01 -> Annotator

Desktop Mode



Drawing Mode

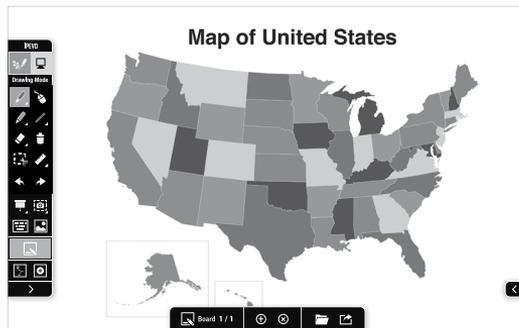

For a quick reference guide, we had all the standard features of IPEVO Annotator summed up in the following table:

Function Groups	Icons	What They Do
Settings Changing	Rounded Corner Arrow	• Rounded Corner Arrow icon changes the default view of Annotator
	Hide Toolbar	• Hide Toolbar icon hides Annotator's toolbar
	Computer	• Computer icon changes Annotator to Desktop Mode which hides the annotation features
	Pen	• Pen icon changes Annotator to Drawing Mode which allows drawing and annotating
Drawing and Annotating	Whiteboard	• Whiteboard icon allows toggling between your screen and "whiteboards"
	Brush Pen	• Brush Pen icons allow drawing or annotating
	Basic Shapes	• Choose a Fountain Pen or Disappearing Ink for more fun • Basic Shapes icon lets you draw basic shapes such as rectangles or ovals
	Measurement Tools	• Compass tool available. Enables you to draw circles of specific radius • Ruler and Protractor tools available for measuring lines and angles
Editing	Eraser	• Eraser icon allows selective erasing of drawings or annotations
	Trash	• Trash icon clears all drawings and annotations at once
	Scissors	• Scissors icon duplicates selected drawings and/or annotations for use on your screen or "whiteboard"
	Undo	• Undo icon steps one step backward in your annotation changes
	Redo	• Redo icon steps one step forward in your annotation changes
Image Capturing	Screen Capture	• Screen Capture icon saves part of your current screen as an image
	Snapshot	• Snapshot icon takes a snapshot of your entire screen
	IPEVO doc cam	• IPEVO doc cam icon lets you use your connected IPEVO doc cam's live feed as the background for drawings and annotations
Screen Recording	Screen Recording	• Screen Recording icon can record all onscreen activities
Screen Shade	Screen Shade	• Screen Shade icon allows highlighting of important sections on the screen while darkening the rest to focus the attention of your audience
Image Reviewing	Review	• Review icon lets you view and manage images captured using Annotator
Mouse / Keyboard	Mouse	• Mouse icon allows normal control of other applications while your drawings/annotations still appear on screen
	Keyboard	• Keyboard icon brings up a full keyboard to allow the inputting of text using the Interactive Pen

To learn more about using IPEVO Annotator, please visit the Annotator's website at: Support.ipevo.com/Annotator

FAQ

How do I quickly determine a good working distance between the screen and the Sensor Cam?

Normally, the projector is a good location to place the Sensor Cam. If you are using a short-throw projector, however, please refer to pages 5 - 7 for the recommended Sensor Cam distance guidelines.

Can I use rechargeable AAA batteries for the Interactive Pen?

Yes. Rechargeable alkaline batteries are recommended.

Can I use IS-01 with my own software instead of IPEVO Annotator?

Yes. IS-01 can be used with third-party image processing software and whiteboards. Any mouse-based software should work fine.

How do I stop the IS-01 driver from running at start up?

Follow these steps according to your system:

Mac: System Preference -> Users & Groups -> Login item. Uncheck IS-01 Driver.

PC: Start Menu -> Enter "msconfig" in Run (Windows XP) or Search Bar (Windows Vista & 7) -> Startup tab -> uncheck IS-01 Driver -> OK. Restart to apply this setting.

What should I do if the cursor is not pointing correctly and/or following the Interactive Pen correctly?

The cursor may lose accuracy if the screen resolution or screen ratio has changed, or if the Sensor Cam has been moved. Please run the calibration process again.

Why is there no scrollbar in my browser or finder window in Mac OS X when using IS-01?

By default, scrollbar is enabled only when a mouse is connected to Mac. You can manually enable the scrollbar by going to System Preferences -> General and set "Show scroll bars" to "Always" to enable scrollbars.

Troubleshooting

When I tap on the corners during calibration, the points don't fall within the center white box.

Move the Sensor Cam closer to the area where the corresponding points do not appear. Or, move the Sensor Cam further away from the screen. Run the calibration process again.

The cursor on my screen is jumping around abnormally and I am not able to control it.

Remove any strong light source or infrared equipment close to the Sensor Cam, as these may interfere with the Sensor Cam.

During calibration, multiples spots appear or spots appear erratically.

1. Remove any strong light source or infrared equipment close to the Sensor Cam, as these may interfere with the Sensor Cam.
2. Ensure the projector screen you are using is not made of highly reflective glass or metal. Such reflective materials affect Sensor Cam's operation.

The pen trace continually breaks when I write or draw with the Interactive Pen.

1. The Sensor Cam might be placed too far away from the screen. Move the Sensor Cam closer to the screen and run the calibration process again.
2. Pen trace can only occur if the Sensor Cam's vision field is not blocked. Please do not draw or write with your body blocking the Sensor Cam.
3. Replace the batteries in the Interactive Pen. Low batteries can have an adverse effect on pen trace and accuracy.

My pen trace and pointing are inaccurate after I change screen resolution.

Changing the screen resolution throws off the calibration. Please run the calibration process after every resolution change.

My pen and cursor lose accuracy every now and then.

Please make sure the Sensor Cam is positioned on a flat and stable surface, and that the Adjustment Knob is tight. A slight tip of the Sensor Cam may result in inaccurate operation.

I have the task bar set to hidden, and I can't use the task bar with the Interactive Pen.

Please uncheck the auto-hide option and position the task bar on the screen when using IS-01.

© 2016 IPEVO Inc. All rights reserved. IPEVO, IPEVO Annotator, IS-01, the IPEVO logo, and other IPEVO marks are owned by IPEVO Inc. and may be registered. All other trademarks are the property of their respective owners.

IPEVO
www.ipevo.com

**Customer Service
(International)**
Email: service@ipevo.com
Tel: +886-2-5550-8686

Customer Service (USA)
Email: cs@ipevo.com
Tel: +1-408-490-3085